



PURPOSE

For running and unlatching from J Unlatching Heads.

ASSEMBLY PARTS

1. Fish Neck
2. Body
3. Spring
4. Holding Head
5. Pin

OPERATION

Attach the J Unlatching Tool to the toolstring and install equipment to be ran with a J Unlatching Head, lower into the wellbore to desired depth. Set down gently on top of a pre run no-go, the toolstring weight will actuate the J Unlatching Tool and J off of the J Unlatching Head. Remove the toolstring from the wellbore.

Nominal Size		0.75"	1.00"	1.187"
Assembly Number		1201JT075A00	1201JT100A0	1201JT118A0
Item	Part Name			
1	Fish Neck	1201JT07501	1201JT10001	1201JT11801
2	Body	n/a	n/a	1201JT11802
3	Spring	1201JT07503	1201JT10003	1201JT11803
4	Holding Head	1201JT07504	1201JT10004	1201JT11804
5	Pin	1201JT07505	1201JT10005	1201JT11805
Top Thread Connection		0.50"-13 UNC	0.625"-11 UNC	0.938"-10 UN
Max O.D.		1.00"	1.75"	1.50"

Nominal Size		1.375"	2.31"
Assembly Number		1201JT137A0	1201JT231A0
Item	Part Name		
1	Fish Neck	1201JT13701	1201JT23101
2	Body	1201JT13702	1201JT23102
3	Spring	1201JT11803	1201JT23103
4	Holding Head	1201JT13704	1201JT23104
5	Pin	1201JT13705	1201JT23105
Top Thread Connection		0.938"-10 UN	1.062"-10 UN
Max O.D.		1.75"	2.50"

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061